

Getting Started

First Edition, July, 2001

Part Number 41000654-002

Prog. — Create playlists of your favourite songs. Press and hold the **Prog. Button** when CD is not in play.

Press the **Fast Forward**, **Rewind** or **+10** buttons to locate the tracks you want in your playlist.

Press the **Prog. Button** to select each track.

Repeat Steps 2 and 3 until you have finished selecting tracks.

Press **Play/Pause** to begin playing the playlist of tracks.

Press **Stop** to stop playing the playlist and to clear it from memory.


+10 — Skip 10 tracks ahead.

Mode

- 1** Repeat Current Song
- All** Repeat All Songs
- S D** Shuffle Directory
- S All** Shuffle/Repeat All Songs

Release Latch

Slide to open RioVolt.

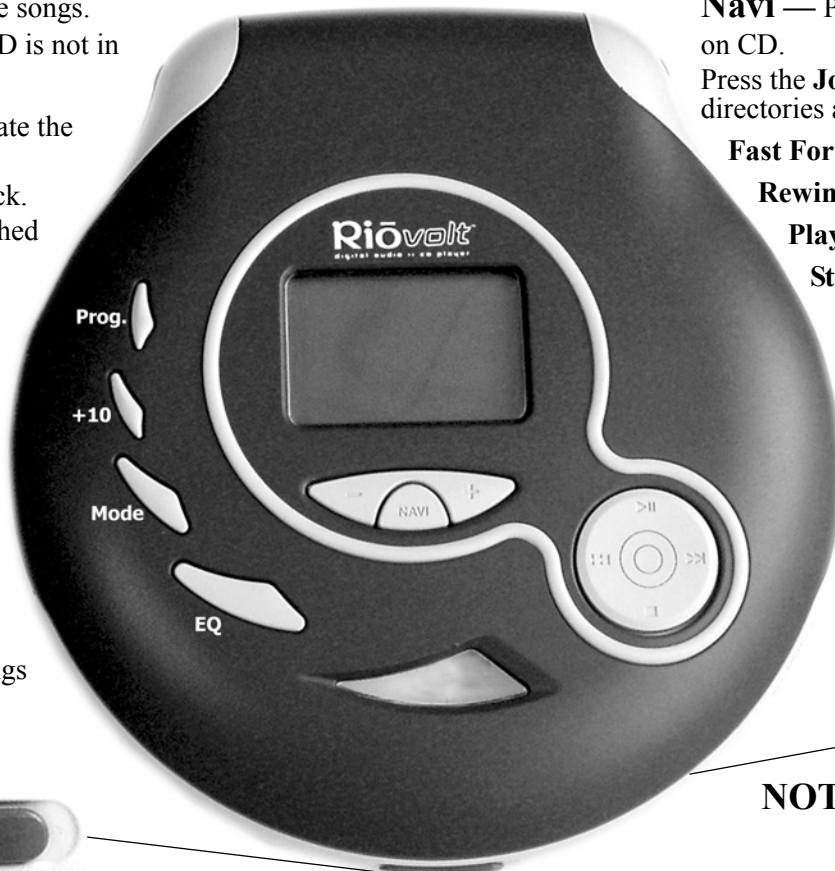

Rewind ⏮ Go Back/Exit

Play/Pause ⏸ Toggles options (On/Off, 1x/2x, etc.)

Stop ■ Escape Menu Mode.

1. **SPEED SCAN** — Controls the speed at which you can scan through directories. (1x, 2x, 4x, 6x)
2. **BEEP control** — When enabled, pushing certain buttons will produce audible beeps.
3. **EXT control** — Controls whether file extensions (MP3, WMA, CD, & ASF) are displayed.
4. **TAG control** — Controls whether ID3 tag information is displayed.

Navi — Press once to access directories on CD.

Press the **Joypad** to scroll through directories and to make selections.

Fast Forward ⏭ Next Menu/Select

Rewind ⏮ Go Back/Exit

Play/Pause ⏸ Move Up

Stop ■ Move Down

Volume Bar

- Decrease
- + Increase

Hold Switch



NOTE: The Hold Switch must be **OFF** to power on the RioVolt.

How to Start:

Unpack the RioVolt SP90 and all of its components. Plug the **AC Adaptor** (not included) into the **Power Port**

OR
Remove the **Battery Door** and insert **2 AA Alkaline batteries** (included) and replace the **Battery Door**.

Plug the **Earphones** into the **Headphones Port**. Slide the **Release Latch** to open the RioVolt.

Insert a music or digital audio CD into the RioVolt. Snap lid shut.

Press and hold the **Play/Pause** button on the **Joypad**

Joypad

Play/Pause ⏸

Press to play or to pause.
Press and hold to turn on.

Fast Forward ⏭

Press to go to next track.
Press and hold to fastforward through current track.

Rewind ⏮

Press to return to previous track.
Press and hold to rewind through current track.

Stop ■

Press to stop.
Press and hold to turn off.

Refer to EQ and Navi functions for additional uses.

